ROMOSS®

sailing 4 User Manual

www.romoss.com

EN-Ⅰ DE-Ⅱ FR-Ⅲ RU-Ⅳ AR-Ⅴ ES-Ⅵ PT-Ⅶ KR-Ⅷ JP-Ⅸ

Product appearance

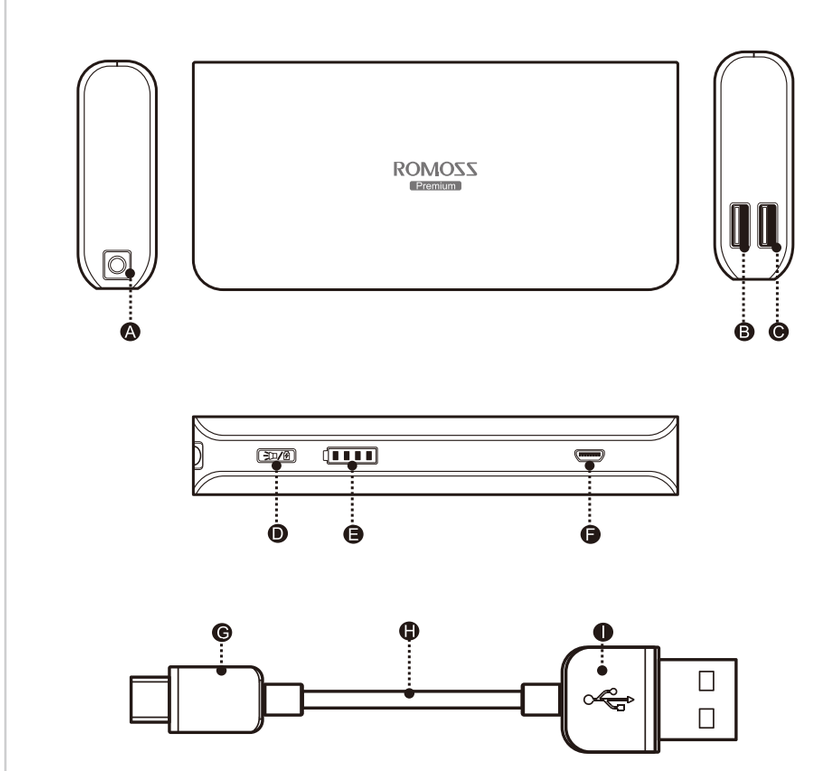

Ⓐ LED flashlight Ⓑ USB output port ❶

Ⓒ USB output port ❷ Ⓓ Button

Ⓔ LED power indicators Ⓕ Micro USB input port

Ⓖ Micro USB connector Ⓗ USB cable

Ⓘ USB connector

1 Charge sailing 4 with AC adapter (AC adapter is not bundled)

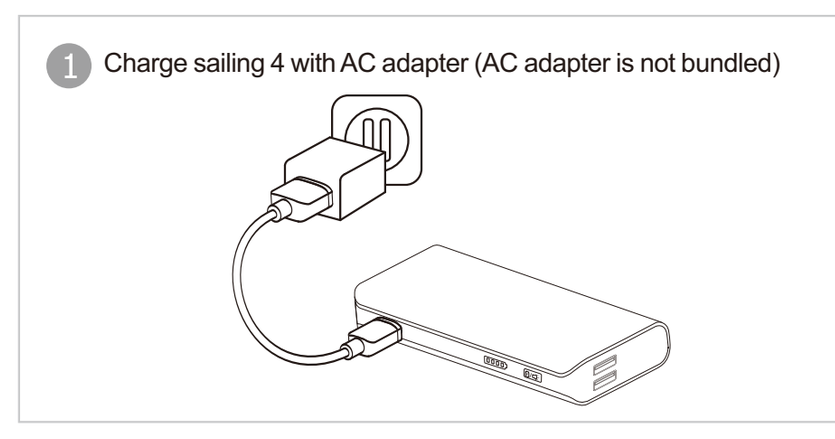

2 Charge sailing 4 by connecting it to USB port on computer

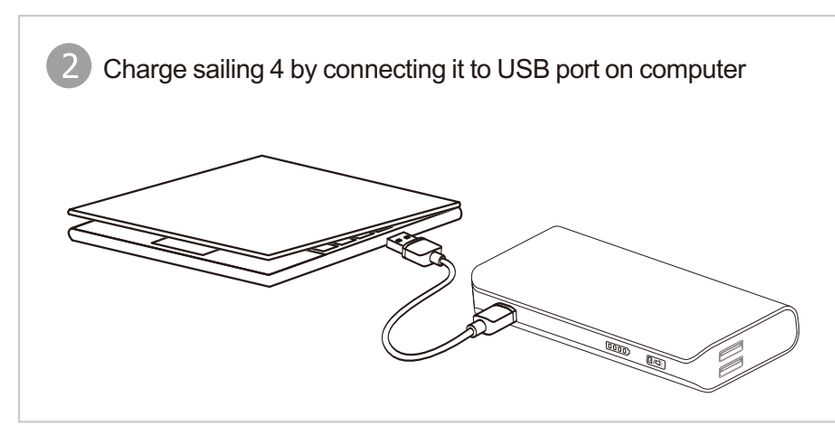

3 Charging digital products using sailing 4

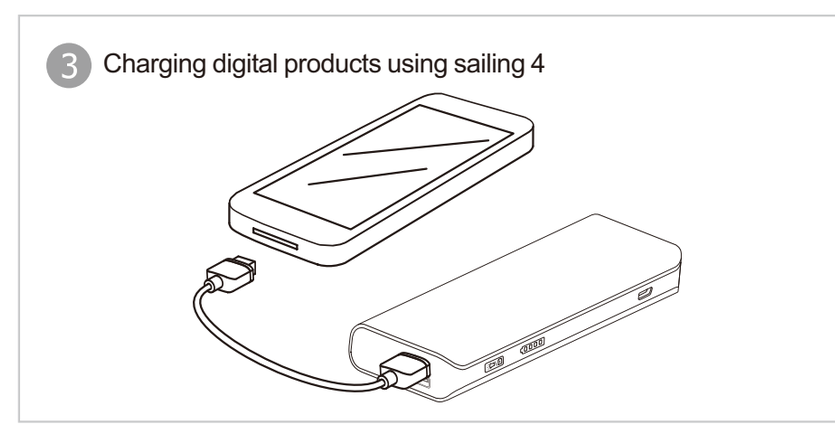

英

EN

sailing 4

High-performance External Battery

Support most DC5V USB input smartphones, tablets, MP3, MP4 and other digital products charging.

Thank you for using ROMOSS products.
Please read the instructions carefully before using the product.
Follow the instructions and use it properly.

Instructions

Charging sailing 4 (Figure ❶ / Figure ❷)

1. Use original USB data cable and connect micro USB to micro USB port on sailing 4;
2. Connect USB cable to USB port on DC5V USB charger or computer. If LED signal flickers, it means sailing 4 is being charged;

Please pull out power supply after recharging fully.

Charging digital product with sailing 4 (Figure ❸)

1. Check if the charging voltage of the digital product is compatible with the DC5V output voltage of sailing 4.
2. Use the digital product's original cable, and connect one end to the digital product, the other end to sailing 4. If battery signal (output signal) lights up, it means the charging process starts. When the signal (output signal) goes out, it means the digital product is fully charged.

Flashlight function

- Press the switch for 2~3 seconds to turn on the LED flashlight and another 2~3 seconds to turn it off.

Indicator of battery left

LED4 LED1	LED Signal	Battery Percentage
	1st signal lights up	0~25%
	1st, 2nd signals light up	25~50%
	1st, 2nd, 3rd signals light up	50~75%
	1st, 2nd, 3rd and 4th signals light up	75~100%

1. When switching off, LED signal will go out in 5 seconds and the battery will enter sleep mode in about 1 minute. If users want to use the battery to charge digital products, please switch on to wake it up.
2. When switching off, the 1st signal (output signal) will flicker if the power is less than 5% to prompt users that the battery itself needs to be charged.

Specifications

Name	sailing 4	Model	PH40
Capacity	10400mAh	Weight	~256g/9.03ozs
Input	DC5V 2.1A MAX.		
Output	❶ DC5V 2.1A MAX.	❷ DC5V 1A MAX.	
Size	~L138x W62 x H21.5mm	~L5.43 x W2.44 x H0.85inches	
Charging time	~7 hours (using 2.1A AC adapter) ~14 hours (using 1A AC adapter) ~27 hours (using 500mA AC adapter or PC USB)		
Environment for Use	Outdoors/indoors/inside a vehicle		
Ambient Temperature for Use	Charging 0℃~45℃; discharging -10℃~60℃		
Environment for Storage	-20℃~60℃		
The electrical core will have 85% capacity left after 300 cycles. (From fully charged to fully discharged is a cycle)			

Cautions:

1. Charge the product itself before using it to charge other products.
2. Do not place or use the product in very hot or humid environment; do not place or use it in direct sunlight (ambient temperature for use: charging 0℃~45℃; discharging -10℃~60℃; ambient temperature for storage -20℃~60℃).
3. Do not throw this product into fire or water, so as to avoid possible fire and explosion.
4. Please keep the product out of the reach of children.
5. Do not use it when nobody is around.
6. Do not dismantle or assembly the product yourself; the product does not have any parts that need users to dismantle, assembly or maintain themselves.
7. Do not shake it, tap it or hit it.
8. Do not use it if any liquid leaks out of the product. If the liquid goes into your eyes, do not rub your eyes, but quickly flush your eyes with running water. If necessary, go to see a doctor.
9. It is normal that the product gets hot under proper operations. Please use with care when using or finishing using the product.
10. Original transmission cables and connectors are required for all operations. Use of non-original products may lead to severe or deadly injuries or monetary loss.
11. Do not use paper or other objects to cover or shield the product, which may affect heat dissipation and cooling.
12. Check the voltage before using the product, so as to avoid unnecessary damage to the product caused by improper use under inaccurate voltage or power.
13. Please charge and discharge the product once every three months if it is not used for a long time. This can ensure the life cycle of the product.
14. Once discharged, please recharge the product fully so as to prepare for later use, for example, for charging digital products.
15. Unplug the power cable when not using the product, so as to avoid injury or property loss.

德

DE

sailing 4

Hochleistung-Mobilbatterie

Wichtige Hinweise

法

FR

sailing 4

Batterie Externe Haute Performance

Précautions :

俄语

RU

sailing 4

Меры предосторожности:

AR

sailing 4

阿

ES

sailing 4

Batería externa de alto rendimiento

Precauciones:

西班牙

PT

sailing 4

Bateria Externa de Alta Performance

Cuidados:

巴葡

KR

sailing 4

고성능 외장 배터리

주의:

韩

JP

sailing 4

高性能外部バッテリー

注意事項:

日

版本	更改内容	制图	日期
A0	原始发行	蒋团球	13/10/09

ROMOSS®	深圳罗马仕科技有限公司 Shenzhen Romoss Technology Co.Ltd.		
产品名称	说明书sailing 4九国语言版		
物料编号	YYSM00133	尺寸	70X110mm
图纸制作	蒋团球	日期	
颜色			
工艺	60g书纸印单黑		
市场部确认	销售部确认	产品部确认	